


Remove the glass and take out the motor.

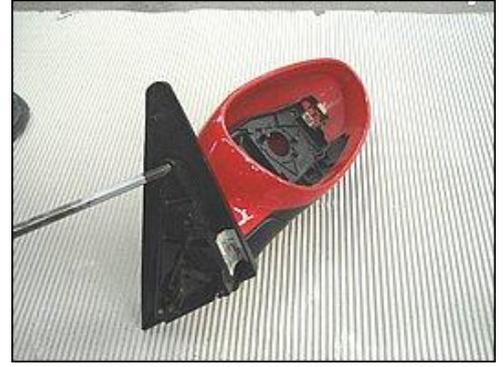

Undo the screws and remove the housing from the arm.



Insert the screw supplied and tighten the nut.



Compress the spring and remove the U-clamp.




Remove the screw and use the collar to push the snap ring off.



Remove the spring. The disassembly is complete.



Put the new housing onto the arm. Mount it back on in reverse order. Secure it with the u-clamp.

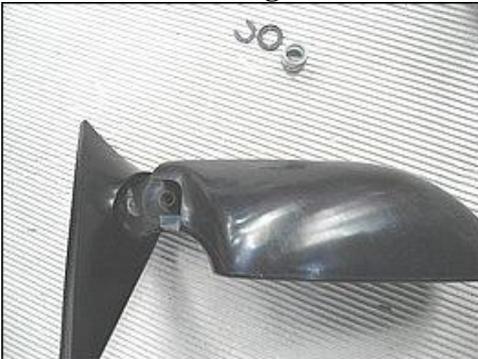

Screw on the cap and done!

