

Porsche 981 Boxster Stainless Steel Sports Side Grille Kit

Kit Contents: -


- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille



Upper Side Mesh Grille Fitting Instructions

<https://www.youtube.com/watch?v=dSQnaRQ4bd0&feature=youtu.be>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate clip behind the sensor as shown in fig 1 then clip into Position using your hand from behind as shown in fig 2 then locate opposite end bracket behind aperture (use a light to make sure bracket is in place fig 3).
3. Once the outer bracket is in position flex the grille so that the inner bracket locates behind the aperture and that the grille is secure (fig 4).
4. The Grilles are now complete.

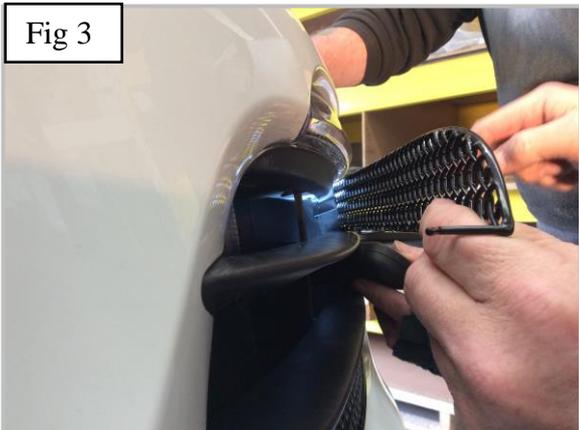

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Lower Side Mesh Grille Fitting Instructions

<https://www.youtube.com/watch?v=dSQnaRQ4bd0&feature=youtu.be>


1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly slide the outer grille into the aperture making sure to locate the inner bracket so it clips behind the aperture fig 1.
3. Gently flex and push the front of the grille until the inner bracket clips into position fig 2.
4. The grilles are now complete



Centre Side Mesh Grille Fitting Instructions

<https://www.youtube.com/watch?v=dSQnaRQ4bd0&feature=youtu.be>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer hook behind the aperture fig 1.
3. Then guide the inner bracket behind the aperture until it clips into position (fig 2).
4. You can use a long thin screw driver to make sure it has clipped in position (fig 3).
5. The grilles are now complete.

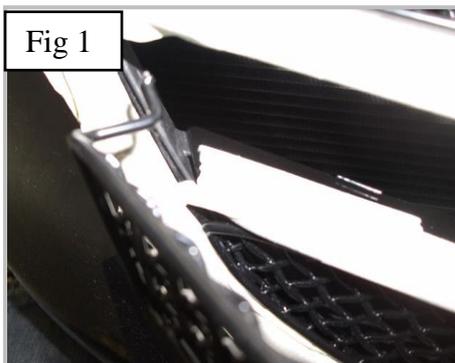

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.