



[www.designtek.eu](http://www.designtek.eu)

Telephone: +44(0)208 900 0 900


## - INSTALATION MANUAL -

Exhaust Muffler / Silencer Sports VALVETRONIC DesignTek  
For Porsche Cayenne

**PART NO: 3606009501**



## I. REMOTE CONTROL SYSTEM FOR YOUR REFERENCE

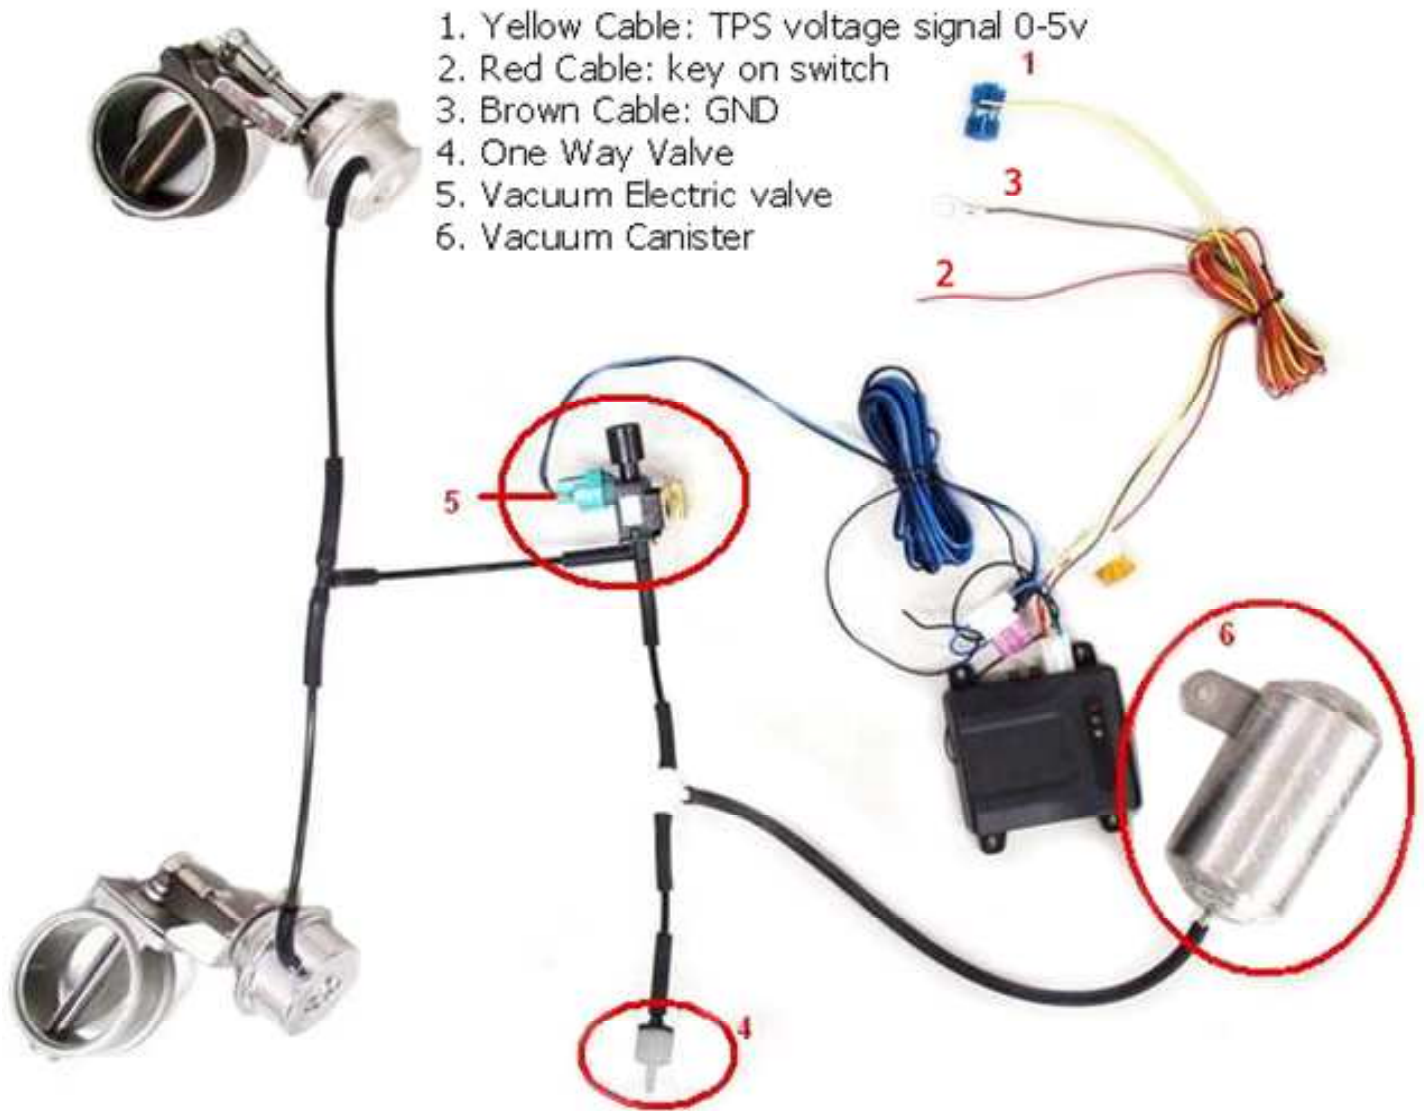

## II. SEARCH KEY OIV POWER⊕ , GND⊖ AND TPS VOLTAGE SIGNAL 0~5V•





## A close-up photograph of a car's fuse box. The fuses are arranged in two rows. The top row contains fuses labeled 10, 15, 5, 15, 30, 30, 30, 30, 15, 5, 10, 5, 20. The bottom row contains fuses labeled 30, 30, 30, 30, 15, 5, 10, 5, 20. A red wire is connected to the 30A fuse in the bottom row, which is circled in green. The wire is connected to the terminal on the left side of the fuse. The fuse box is black plastic and is mounted in the engine compartment. The surrounding area includes various mechanical parts and wiring.







## 2. GND0 : HANG ON GND (BROWN CABLE)

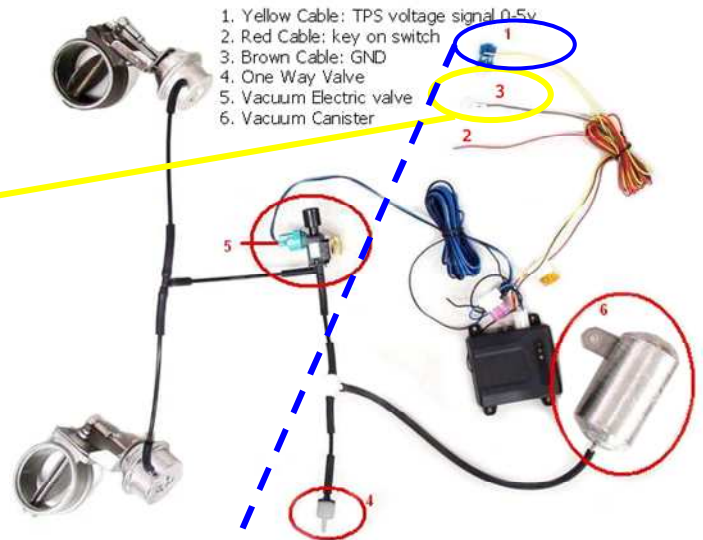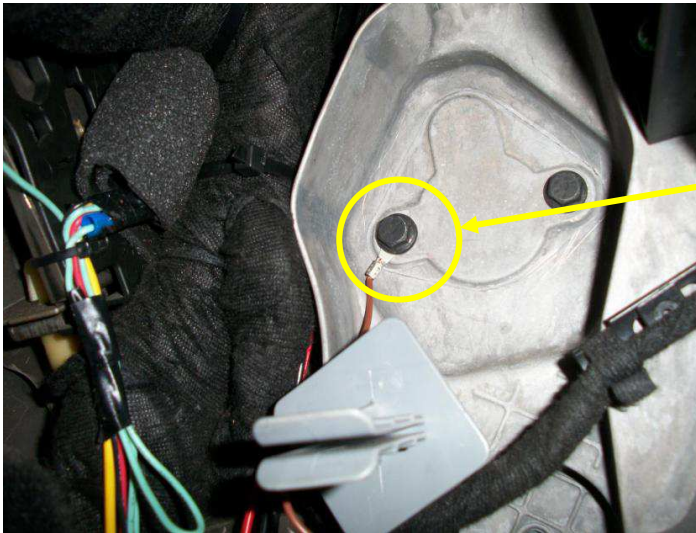


## 3. PUT TPS 0~5V (YELLOW CABLE) AND OEM WIRE (YELLOW WITH BROWN CABLE) SIDE BY SIDE

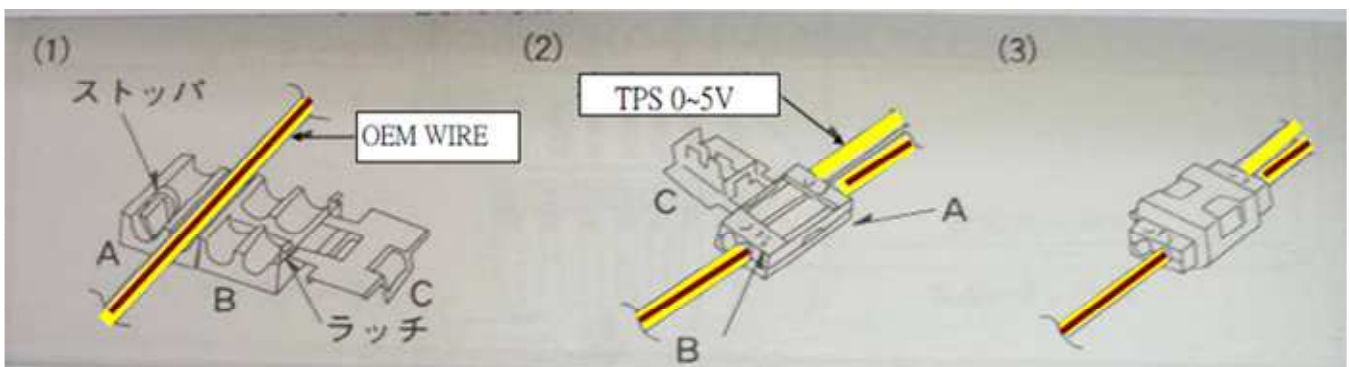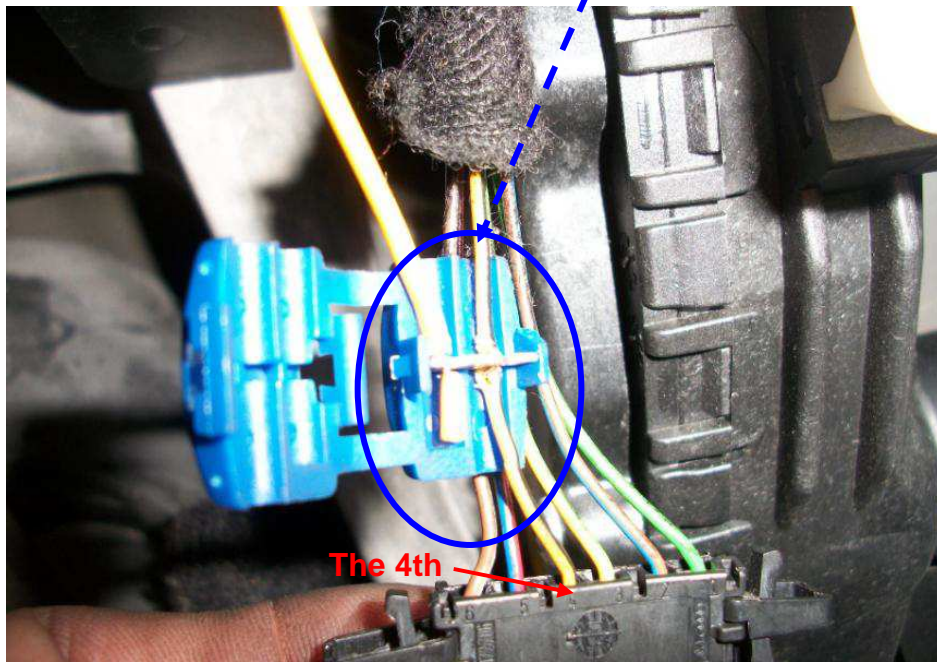





### III. CONNECT VACUUM ELECTRIC VALVE , ONE WAY VALVE , VACUUM CANISTER





1. OPEN CAR'S HOOD AND FIND THE POSITION AS PHOTO SHOW

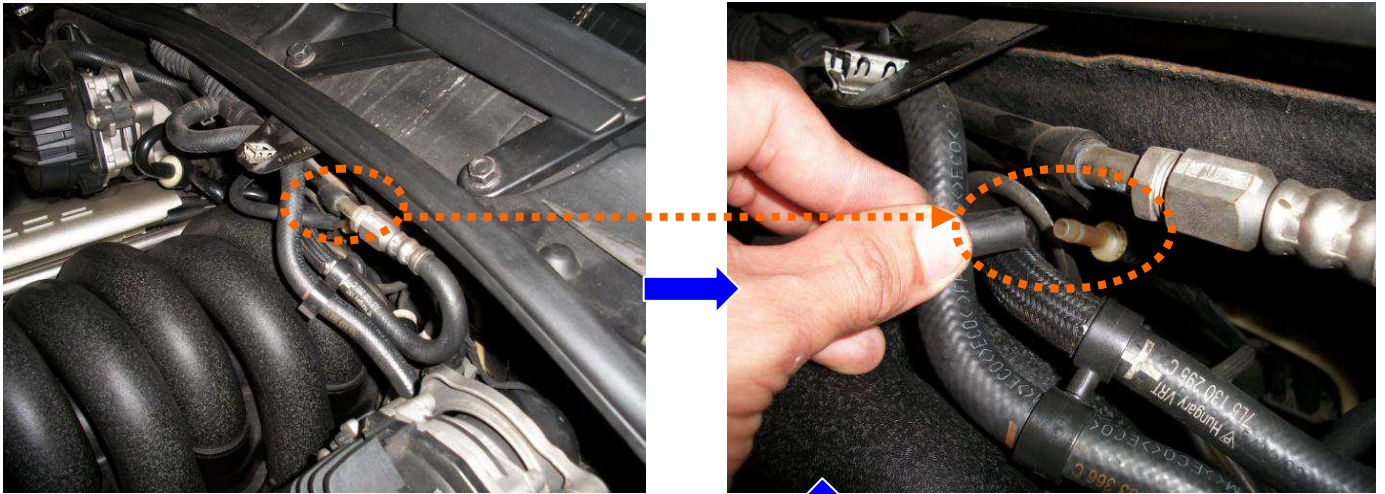

2. CONNECT ONE WAY VALVE , SMALL 3 IN 1  
COLLECTOR AND ORIGINAL CABLE

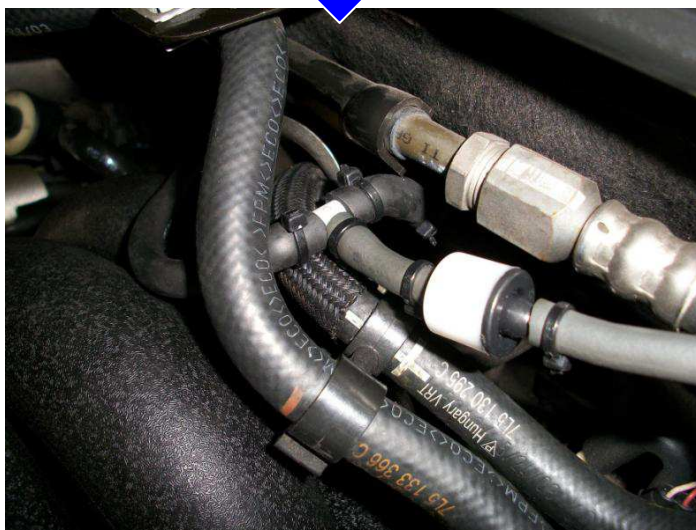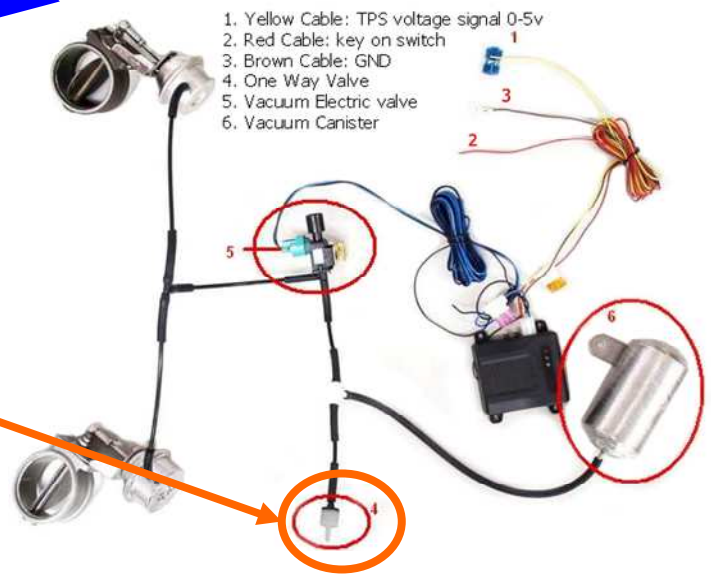




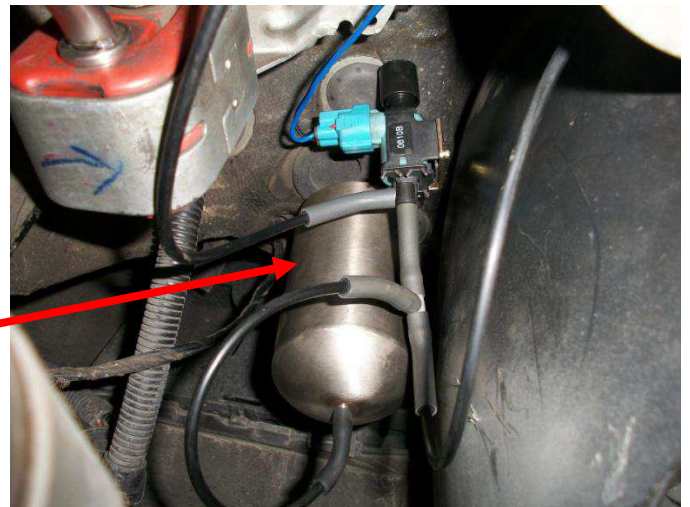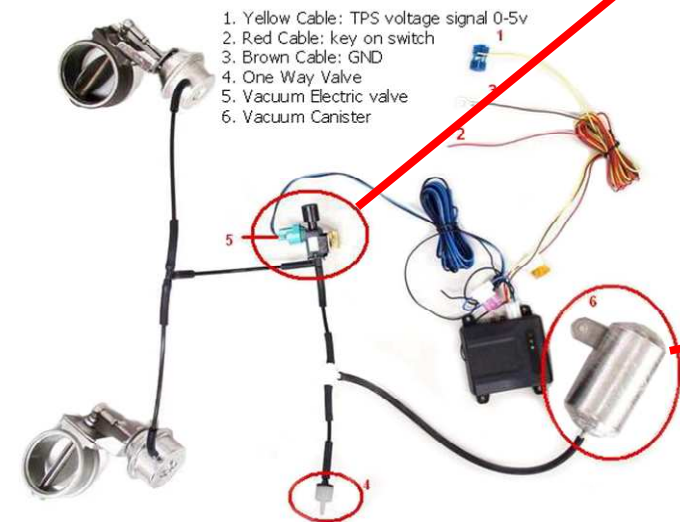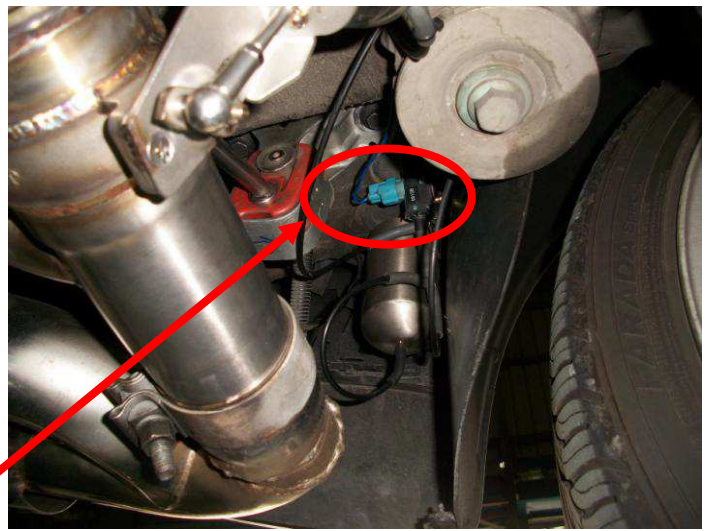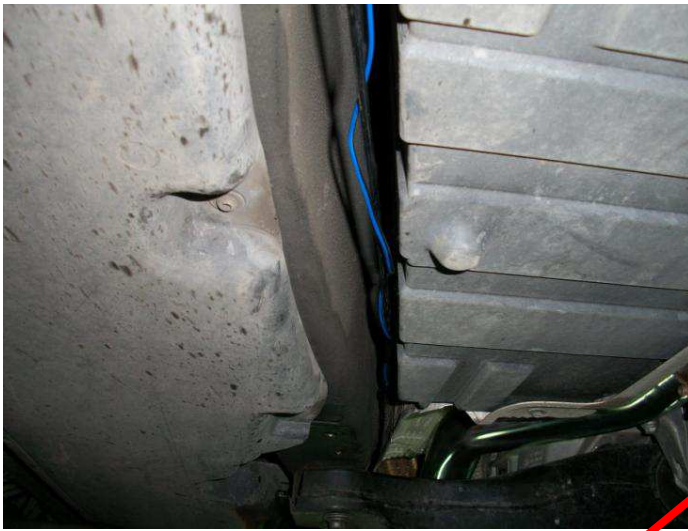


**INSTALL VACUMME CANSITER AND ELECTRIC VALVE THAT YOU ARE COMPLETE ALL THE STEP**

**NOTICE:**

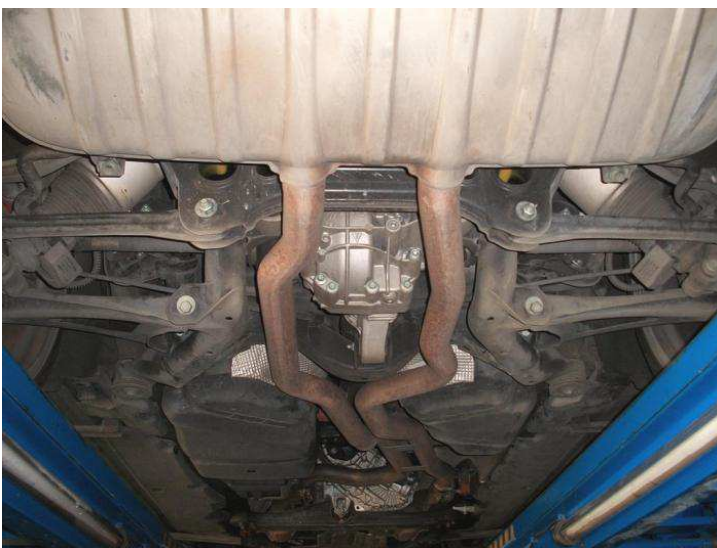

**OEM MUFFLER**

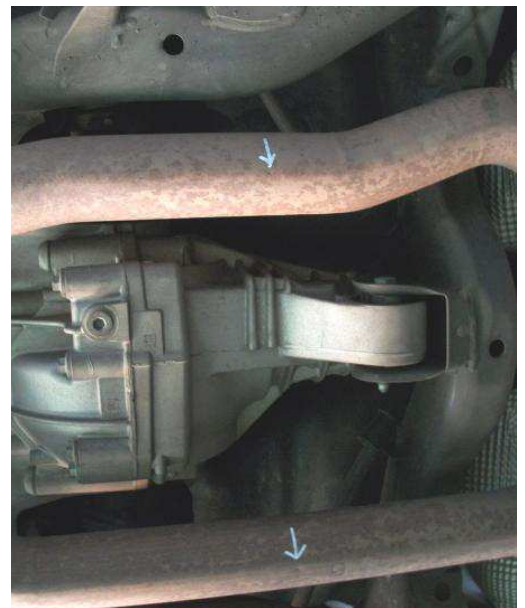

**WHEN YOU WANT TO CHANGE YOUR MUFFLER, YOU NEED TO CUT OEM TUBE, THE WHITE ARROW POINTED OUT THE PROBALLY POSITION.**