

We offer a wide range of products which we can fit at our London based service centre and body shop. Our specialist team are familiar with fitting complicated products, conversions, spoilers and accessories. We have the capabilities to modify, adjust and make electrical connections as well as painting and fitting. It is not always possible for every customer to bring their vehicle to us for the products to be fitted. We supply parts on a national and international basis to customers who are looking to undertake a particular job at their own nominated garage.

If you are looking to purchase parts, spoilers or conversion parts you may need to take into consideration following details:

1. Have a good auto electrician who can rewire or make an adequate loom between the vehicle and any new electrical parts. Wiring looms are normally not provided with the products so your auto electrician will need to make the connection to the new product using some of the existing wiring and fittings on the vehicle.
2. If your conversion requires exhaust tail pipes or other exhaust products your mechanic might need to modify or adjust by means of welding, please make sure your fitting shop have the capabilities to make adjustments. In some cases exhaust sensors may need to be changed or modified.
3. If your vehicle is fitted with parking sensor the wiring looms and sensor holders should be retained from your vehicle and refitted into the new product, again slight adjustment may be needed.
4. Body panel, grills and air ducts should be retained from your vehicle as they might need to be refitted to the new product, again slight adjustment may be needed.
5. Conversion kits and other parts normally do not come with fitting instructions it is assumed that the person fitting the products has body shop or mechanical experience.
6. Please check that the product you are purchasing or fitting does not invalidate your vehicle's warranty and complies with your country's local vehicle authority.

We recommend conversions and parts are only fitted by professionals that have the capabilities to carry out the work required. We do not recommend that you undertake any work on your vehicle if you do not have any body shop or mechanical training and experience.

Fitting parts to your vehicle is not a DIY job.

Remove the front bumper and air ducts



---

Keep the front bumper beam, this will need to cut slightly to take the shape of the 991 look bumper



You may also need to bring the front bumper beam forward slightly by using a packer made from metal and longer bolts




---

Fit the bumper to the vehicle, check the fitment and make adjustments to the finish, you may need some fibre glass filler if you want the bumper to have a perfect aligned fitment



---

Glue in the original 991 lamps carriers, make sure this sets very well.

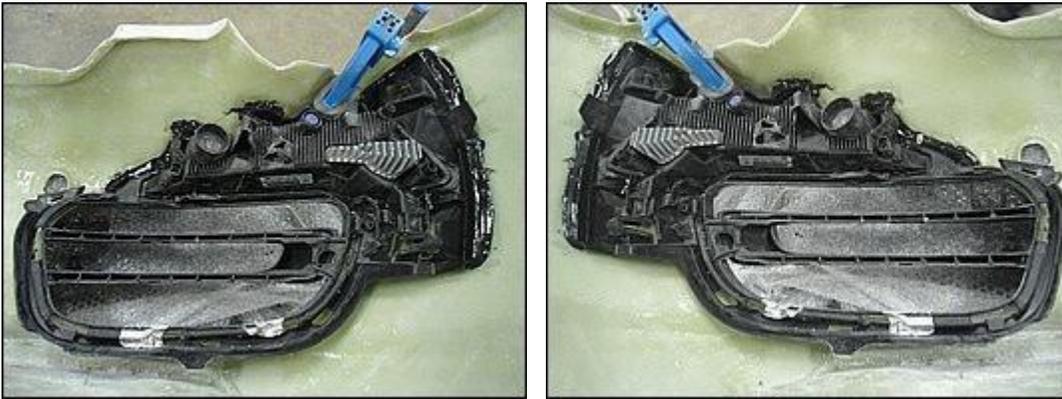

---

You may need to shave off a bit of the plastic from the 991 lamp to make it fit



---

You can use the connectors from you original lamps or ask the bodyshop auto electrician to make a direct connection.

