

R-9003

OUTSIDE LAP BELT MOUNT INSTALLATION INSTRUCTIONS *(Fits all Porsche sports cars)

The Brey-Krause R-9003 outside belt mount is designed to provide a mounting point for snap-in style harnesses without disabling the factory seat belt.

Step 1.


Remove the bolt attaching the factory seat belt to the doorsill. Remove the spacer between the belt and the doorsill. You will not reuse the bolt or the spacer.

Step 2.

Reattach the factory belt using the supplied hardware and belt mounting brackets shown below. Note: spacer B is used on Boxster & 996 only. Note: Two versions of spacer A are provided—longer, with groove (for 2012 and later cars) and shorter, without groove (for 2011 and earlier cars). Use the appropriate version for your model year. It is the responsibility of the installer to ensure proper thread engagement of the bolt.

Step 3.

Check for proper operation of factory belt.

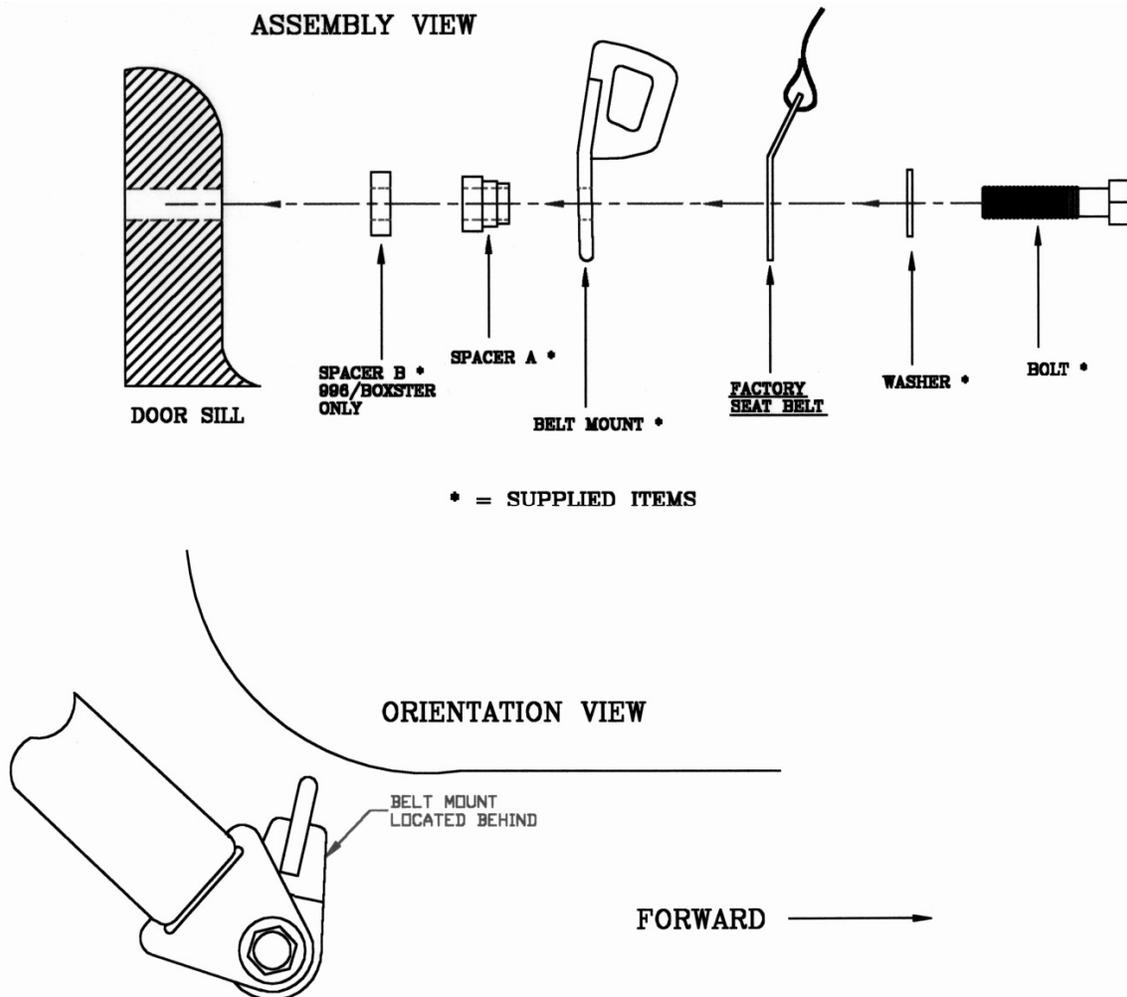

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.