

R-9041

SEAT TRACK ADAPTERS (ADAPTS SPARCO SLIDERS TO 996/BOXSTER CHASSIS) INSTALLATION INSTRUCTIONS


These adapters are designed to adapt Sparco seat sliders to 996/Boxster chassis. Sparco sliders not included. *Modification to the Sparco slider is required. See below.

The actuating tube supplied with the Sparco sliders positions the sliders 13" apart. The slider must be mounted on 16" centers for 996/Boxster models. Order Brey-Krause part# R-9045 actuating tube to replace the Sparco actuating tube. Side mount brackets for Sparco & Recaro seats also available from Brey-Krause.

Step 1.

Cut 3/4" from the rear lower portion of the sliders. This is the portion of the slider that bolts to the floor. This is necessary to expose the rear most mounting hole of the R-9041 seat track adapter. Do not cut the upper portion of the slider!

See below:

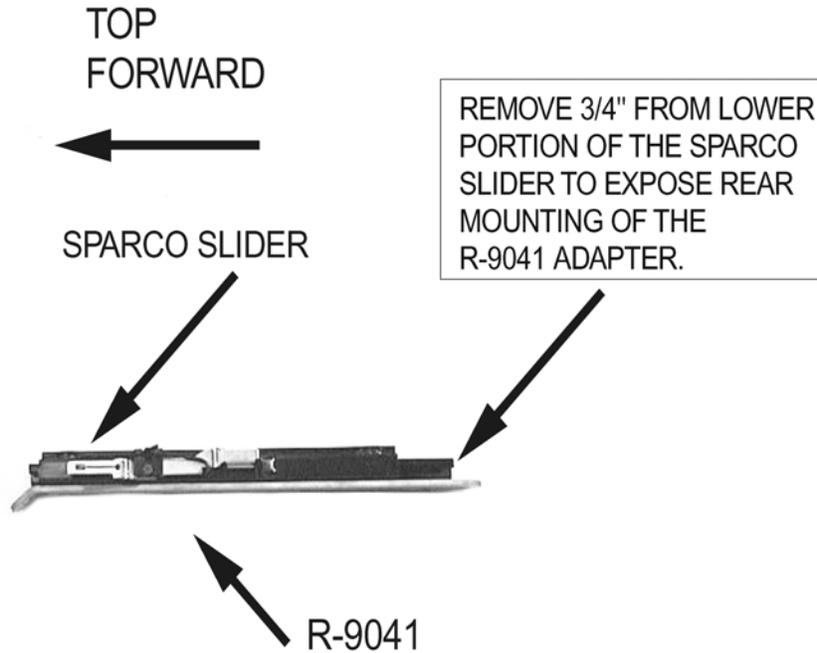

Step 2.

Mount seat track adapters to the sliders using the supplied hardware.

Step 3.

Remove factory seat from vehicle.

Step 4.

Attach adapter/slider assembly to chassis using existing hardware.

Step 5.

Attach R-9045 actuating tube to sliders.

Step 6.

Attach racing seat to sliders per manufacturers specifications.

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.